

QUAD-5 FUNCTION MENU GUIDE

ENTER FUNCTION MENU: Press and hold FUNC key 2 seconds

CHANGE FUNCTION: Momentarily press FUNC

FUNC VALUE: Rotate channel selector to change value.

The radio will exit from the function menu after a few seconds of inactivity. Following are the Functions in order.

MIC GAIN: *μG* Value (OFF, 0-63) **Default: 31**

TALKBACK: *nB* Value (OFF, 0-63) **Default: OFF**

CW SIDE VOL: *εu* Value (0-63) **Default: 31**

BUTTON BEEP: *bEu* Value (0-63) **Default: 31**

CLARIFIER STEP: *StP* **Default: 10Hz**

10HZ

100HZ

1kHz

10KHZ

CLARIFIER: *εLR* **Default: RT**

FIN=RX

RT=RX/TX

T=TX

CLARIFIER PUSH: *PUS* **Default: STP**

COA=CHANGES TX/RX FREQUENCY

T=CHANGES TX FREQUENCY

STP=CHANGES BLINKING DIGIT FREQUENCY

AUTO SQUELCH: *ASQ* Value ON or OFF **Default: OFF**

TRANSMIT TIMER: *tOt* Value 30-600 sec. **Default: 180**

SCAN TYPE: *εε* **Default: SQ**

SQ= Resume 5 Seconds after signal drop

TI= Resume 5 seconds no signal drop

SWR PROTECT: *tSr* Value (ON or OFF) **Default: ON**

VOLTAGE PROTECT: *tde* Value (ON or OFF) **Default: ON**

TX DISPLAY: *tLd* **Default: TF**

TF=TRANSMIT FREQ DISPLAY

SR=TRANSMIT SWR DISPLAY

BAT=TRANSMIT BATTERY VOLTAGE DISPLAY

TOT=TRANSMIT TIME OUT TIMER DISPLAY

R. BEEP FREQ: *rbF* Value 300Hz to 3KHz **Default 10⁵⁰HZ**

R. BEEP LENGTH: *rbt* **Default 500ms**

Value 50ms to 1000ms

CW SIDE TONE FREQ: *εFr* **Default 10⁵⁰Hz**

Value 300Hz to 3KHz

TX SINGLE-TONE FREQUENCY: *tOn* **Default 10⁵⁰Hz**

Value 300Hz to 3KHz